


MAG MOUNT WIRELESS CHARGING PAD

FOREIGN OBJECT DETECTION

Remove phone rings or wallets mounted on device as they will interfere with charging

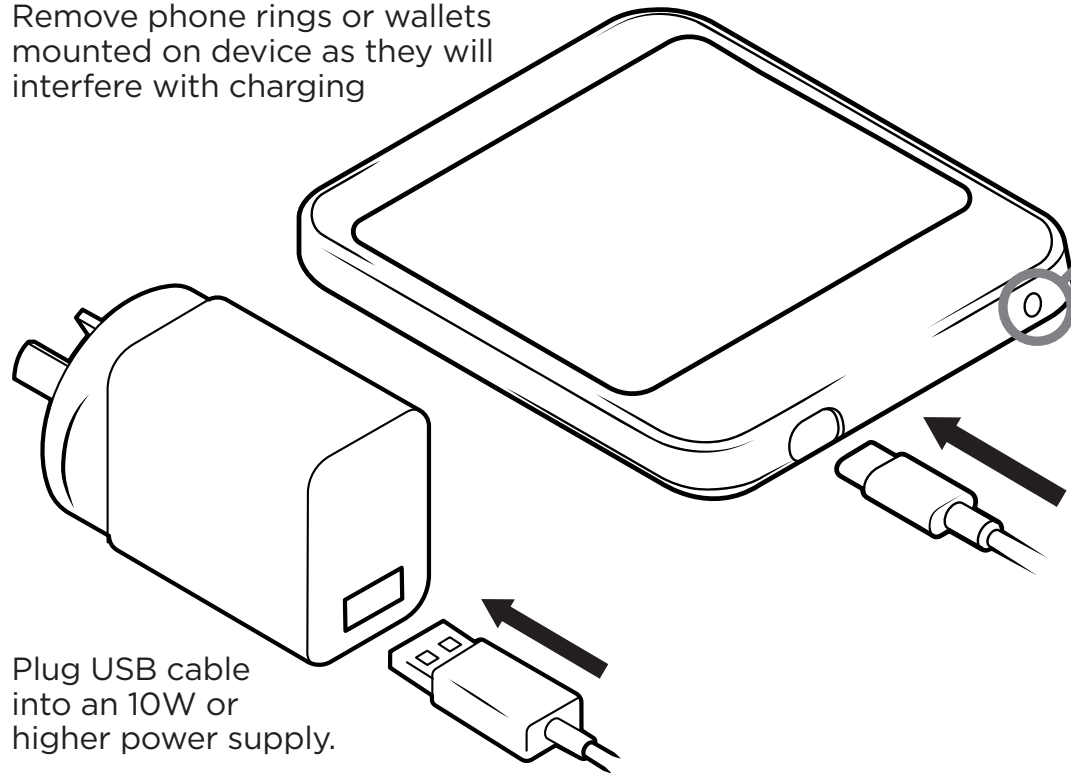

Plug USB cable into an 10W or higher power supply.

NOTE:
Some USB-A sockets such as laptop's and older power bricks may not have sufficient power for this product and may not be able to charge two devices simultaneously

 


LIGHT SENSOR

will automatically enter LED into Night Mode when the room is dark or the sensor is covered

LED LIGHT STATES

	DAY MODE	NIGHT MODE
	CHARGER BASE	CHARGER BASE
NO CHARGING		
CHARGING		 LIGHT GOES OFF AFTER 3 SECS
ERROR/ FOREIGN OBJECT DETECTION	 CONTINUAL FLASHING	 CONTINUAL FLASHING



RACCOLTA DIFFERENZIATA.
VERIFICA LE DISPOSIZIONI DEL TUO COMUNE.
SVUOTARE L'IMBALLAGGIO.